

# Concealed cable kit

## Installation instructions



Please read these instructions carefully. **Forme Bathroom Collection** cannot be held responsible if the installation and use of the towel rail is not carried out in accordance with the instructions given below or for materials not supplied by Forme Bathroom Collection.

### Safety

The towel rail is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance. The towel rail has been designed to withstand the loads expected during normal operation as a towel rail. The towel rail is not a ladder and should not be used as such.




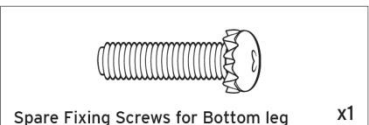

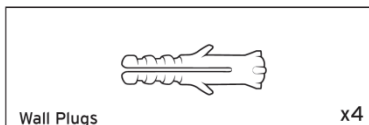
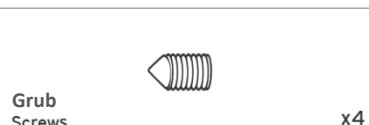
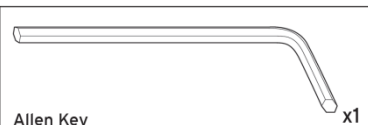
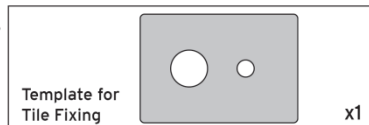
### Electrical connections

The towel rail must be wired by a registered electrician. An isolating switch must be positioned near the towel rail. If the supply cord is damaged the entire towel rail must be returned to **Forme Bathroom Collection**.




### Wall mounting

The towel rail is designed to be fixed through wall cladding into solid timber framing, brick or masonry walls. Plasterboard toggles, of at least 3mm diameter, may be used for 2 of the towel rail fixings.

### Fittings checklist

-   
3 Mushrooms & 1 Mushroom for exposed wire
-   
50mm Woodscrews x4
-   
6mm Diamond Drill Bit x1
-   
Spare Fixing Screws for Bottom leg x1
-   
Spare Fixing Screws for Top Leg x2
-   
Wall Plugs x4
-   
Grub Screws x4
-   
Allen Key x1
-   
Template for Tile Fixing x1

### Concealed Kit

-   
14mm Diamond Drill Bit x1
-   
Wall Anchor x1
-   
Wall Anchor Sleeve x1

## Concealed cord entry

to be used where no existing outlet is present.



1

Mount the concealed cable mushroom onto the wall. Decide whether left or right handed.



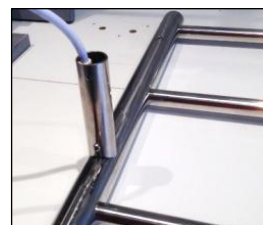
2

If right-handed, remove the cap and plug from the right hand side.



3

Position the cap on the power cord plug.



4

Remove the screw and pass the power cord through the leg. Plug the power cord into the towel rail and tighten the cord to the rail. Slide the leg over the power cord and fix the screw.

5 Fit the other three legs and feed the power cord through the concealed cable mushroom mounted on the wall.

6 Mount the towel rail on the wall and tighten the grub screws on all 4 legs.

## Exposed cord entry

to be used where an existing permanent connection outlet is already wired.



1

Select the mushroom with the hole and mount it on the wall.



2

Select the leg with the cutaway and feed the cable through the leg.



3

Tighten the screw to the leg of the towel rail. Fit the other 3 legs to the towel rail.



4

Feed the cable through the hole in the mushroom.

5 Mount the towel rail on the wall and tighten the grub screws on all 4 legs.